

# ProMeister



## User Guide

### COB LED Headlamp

Art. Nr: PT7703

Produced in China for  
**Bileko Car Parts AB**  
P.O. Box 542  
S-645 25 Strängnäs, Sweden  
Tel: +46 771 72 00 00  
[www.promeister.com](http://www.promeister.com)



RVNR-01

## Operating Instructions

With the following instructions, we would like to help you to get the best functions of your new light.

**Keep this instruction manual for future reference or for subsequent possessors.**

## Technical Data

Light Source	High Power COB LED - main light
Luminous Power	ca. 300 lumen - normal mode (full power) ca. 100 lumen - normal mode (ECO mode) ca. 120 lumen - sensor mode
Operating Time	ca. 2H - full power mode ca. 4.5H - ECO mode ca. 10H - sensor mode
Battery Specification	Li-ion 3.7V, 1500 mAh, 5.55Wh
Charging Time	ca. 2.5H
Charging Input	DC 5V 1A
Degree of Protection	IP 65, IK 07
Operating Temperature	-10°C to +40°C

## Warning

- Do not open the device.
- Do not look directly into the light emitting lamp - Risk of eye injuries!
- Do not operate under direct sunlight or extreme temperature conditions.
- Keep away from children. Children should be supervised in order to insure that they do not play with the device.

## Operating & Charging Procedure

- Operating mode as below Normal mode
  - Press the Main Switch first time, main light switch to ECO mode.
  - Press the Main Switch second time, main light switch to full power mode.
  - Press the Switch third time, whole light switch off.
  - Press the sensor switch, the normal mode off, sensor mode on Sensore mode.
  - Press the Motion Sensor Switch first time, main light switch to Sensor mode, you can switch on or off by waving your hand in front of the light (Sensor distance 0~13±3cm).
  - Press the Motion Sensor Switch second time, sensor mode off and turn to normal mode.
  - Press the Main Switch, the sensor mode off, normal mode on.
- Switch lamp off when charging.
- The LED of the indicator switches to red during charging.
- Is charging is completed, green LED illuminate will turn on.
- Always only use the charger recommended to charge the lamp. The use of a NON-recommended charger can lead to a fire and destroy the lamp.
- Before taking the hand lamp into service for the first time, charge it for 4-5 hours.
- Fully charge the hand lamp before it is stored for a longer period.

## Safety Instruction

- Do not use the device if there is damage to the housing, plug or cable. Consult your local authorized specialist.
- Do not open the device. Repair work and replacing the rechargeable battery pack may only be carried out by electricians.
- Carry out cleaning tasks only when the main plug is removed from the main power.
- There is a risk of short-circuit. Repairs on the device may only be carried out by commissioned and trained persons. Please contact your nearest authorized branch.
- Protect the battery against heat, e.g., against continuous intense sunlight, fire, water, and moisture. Danger of explosion.
- If the battery is damaged or not used correctly, fluids can leak from it. Avoid contact with these. Leaking battery fluids can lead to skin irritation or burns. Rinse off with water if you should come into contact. If the fluid gets into your eyes, make sure you get medical help.
- The lamp is not allowed to be placed on the light surface while being used.

## Environmental Protection

- The device should not be discarded in the normal household waste under any circumstances.
- Dispose of the device via an authorized disposal center or your communal waste disposal facility. Observe the current applicable regulations. Contact your waste disposal facility in the event of any doubt. Dispose of all packaging materials via an environmentally friendly disposal facility. Rechargeable batteries must not be disposed of in the household waste. Return use rechargeable batteries to your dealer or hand them into a battery collection facility.