


## 19pcs Shock Absorber Tool Set

Art. Nr: PT58205

### Features

- Set for removing shock absorber caps
- Includes a large variety of sockets with various sizes
- Provided with bits with special sizes
- DO NOT use with an air/impact wrench

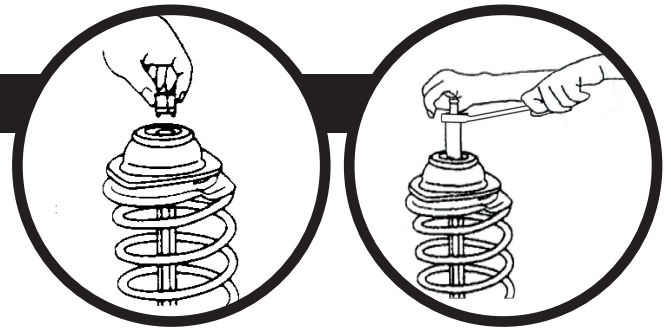

### Specifications of Turnbuckle for Shock Absorber's Top Lid

Size	Mark	Application	Diagram
10.5mm	10.5 x 3.5	Volkswagen Golf Rear Axle	
12.5mm	12.5 x 3.5	Volkswagen Polo Front Axle	
14.5mm	14.5 x 5	Audi 80, Volkswagen Polo, Golf, Passat	
16mm	S 16mm	Audi, Fiat, SEAT, Volkswagen	
17mm	S 17mm	Audi, Ford, Fiat, SEAT, Volkswagen	
18mm	S 18mm	Audi, Ford, Fiat, Japanese vehicles, Opel, Peugeot, Renault, Rover, SEAT, Volkswagen	
19mm	S 19mm	Audi, Citroën, Fiat, Opel, Peugeot, SEAT, Toyota, Volkswagen	
21mm	S 21mm	Audi, Chrysler, Ford, Japanese vehicles, Mercedes-Benz W203, Volkswagen	
22mm	S 22mm	Audi, BMW, Citroën, Fiat, Opel, Peugeot, Renault, SEAT, Volkswagen	
24mm	S 24mm	Volvo	
27mm	S 27mm	Audi, Citroën, Peugeot, Volkswagen	
5.2mm	DD5.2	Audi, Nissan, Volkswagen	
6mm	DD6	Audi, Renault, Volkswagen	
7mm	DD7	Audi, Fiat, SEAT, Volkswagen	
10mm	DD10	Fiat, SEAT, Volvo	
6mm	6mm	BMW, Citroën, Fiat, Ford, Japanese vehicles, Opel, Peugeot, Renault, SEAT	
7mm	7mm	Audi, Citroën, Fiat, Mercedes-Benz (W203), Renault, SEAT, Volkswagen	
10mm	10mm	Reversible Ratcheting Wrench 10mm	
22mm	22mm	Reversible Ratcheting Wrench 22mm	