


Folding Trolley

Art. Nr: PT900063

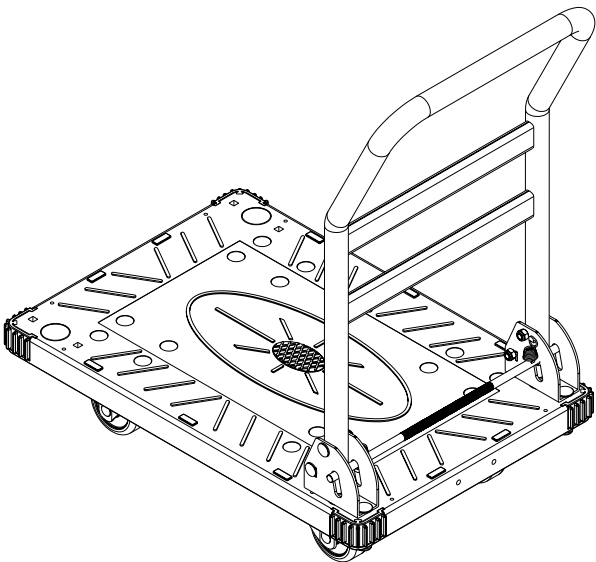

1. Insert aluminum reinforced bars into slot.

2. Install casters.

3. Install handle by screws.

4. Put on screw caps.

Description	Qty.	Description	Qty.	Description	Qty.	Description	Qty.
 Plate	1	 Handle	1	 Caster	4	 Caster Nuts 3/8"	16
 Reinforced Aluminum Bar	2	 Handle Screw/Nuts 3/8"	4	 Caster Screws 3/8" x 1-3/4	16	 Screw Caps	16