



Instructions

- 1 Choose a suitable adapter for the brake caliper piston. Fit the adapter onto the magnetic tip (Fig. 1). Connect the tool to shop air, and make sure that the pressure does not exceed 8 bar.
- 2 Press pressure release button and rotate the lever to move the push spindle forward or backward and fit the tool into the caliper.
- 3 Press operating button and rotate lever to wind the brake caliper piston (Fig. 2).
- 4 After winding the piston, press pressure release button and pull lever to move the push spindle backward, releasing the tool from the caliper (Fig. 3).

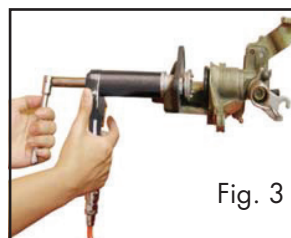

- ❶ Lever
- ❷ Pressure release button
- ❸ Operating button
- ❹ Push spindle
- ❺ Magnetic tip

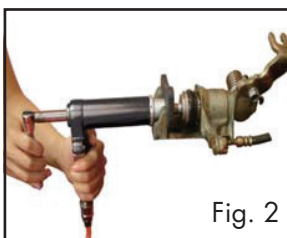

Precautions




CAUTION



- Always read the instructions carefully before using the tool
- This tool kit is for winding back brake pistons ONLY
- Ensure the working area has adequate lighting
- Keep children and unauthorized persons away from the working area
- Keep working area clean and tidy, dry and free from unrelated materials
- DO NOT allow untrained persons to use this tool kit
- Always wear eye protection that meets OSHA and ANSI Z87.1 standards
- Always wear gloves when working with the tool
- Always wear ear protection
- Disposal: Customers should follow local regulations or entrust local organization to handle used/wasted parts

Pro**Meister**

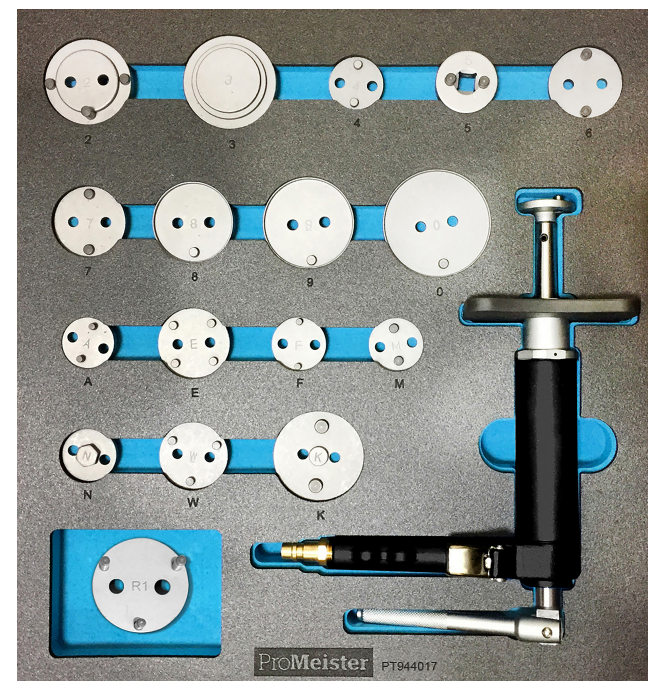

User Guide

Air Powered Brake Caliper Wind Back Tool Set


Art. Nr: PT944017

Produced in Taiwan for
Bileko Car Parts AB
 P.O. Box 542
 S-645 25 Strängnäs, Sweden
 Tel: +46 771 72 00 00
 www.promeister.com

PATENTED **CE**

RVNR-02

Applications

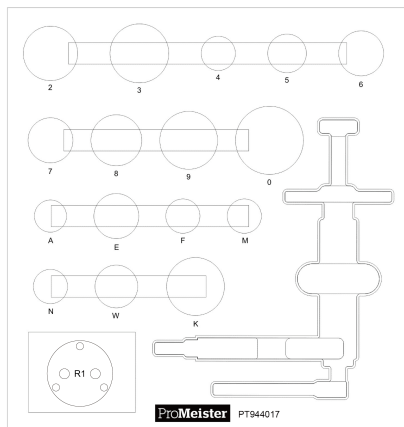

No.	Application	
0	GM most 2-1/2" diameter pistons (Seville/Eldorado 79)	
2	Citroën Honda	(XM , Xantia(F/R))
3	Audi (F) Fiat Alfa romeo (F) Ford Isuzu (F) Honda Jaguar BMW Mercedes Benz Mitsubishi Nissan Rover Toyota Volvo (F) VW	(Fiesta (F)) (Concesto (F)) (XJ6 , XJ40 (F/R)) (318is , 320i , 325TD , 518i , 525i & 1x , 740i , 850ci , M5 (F)) (190 , 200 , 300 , 420 , 560 series (F)) (Colt (F)) (Micra , Stanza , Sunny (F)) (Austin , Metro 200 & 400 series , Maestra , Montego (F)) (Camry (F)) (Passat , Golf GTI (F))
4	Ford Mazda (R) Saab Toyota Fiat Alfa Romeo Honda GM	(Australia , NZ Telstar) (9000 (R) , Lumina) (164 2.0 (R)) (Prelude , CRS 16i) (Saturn(R) , Grand Prix)
5	3/8" adapter	
6	Nissan VW	(Primera) (Golf IV)

7	Audi Rover Subaru Ford Nissan Peugeot Toyota VW Citroën Alfa Romeo Fiat Honda Jaguar Renault Saab Seat Lancia	(80 , 90 , V8+100 , Coupe E (R)) (800 ABS) (L + Z (R)) (Sierra ABS , Granada , Scorpio ABS 85 (R)) (Bluebird 1.8 Turbo , Silvia Turbo , Primera 2.0i LS/GS/GSX (R)) (405 1.9Gi , Gri , Sri , Gtxi , Mi 16 , 605 2.0 Sri (R)) (Celica , Corolla GT , MR2 (R)) (Golf GTI , Jetta Synchro , Jetta GTI 16V , Passat CL , GL , GT , GT 16V , Corrado 16V Scirocco GTX 16V (R))
8	GM most 1-7/8" Diameter Pistons	
9	GM most 2-1/8" Diameter Pistons	
A(Z)	Renault	(R21 , Laguna (R))
E	Nissan Ford	(Maximas)
F(G)	Opel (R)	
M	Ford Mini R68 Mazda 3	(Motors)
N	SAAB Honda Alfa Romeo Audi VW Lancia	
K	Citroën	
W	Volkswagen	(Passat 2005 -)
R1	Alfa Romeo Audi Lancia Land Rover Opel Renault Seat Volvo VW	166 - 1998-2007 A4 - 2007-2015, A4 Allroad - 2009-2016, A5 - 2009-2019, A6 - 2010-2019, A6 Allroad - 2012-2018, A8 - 2002-2010, Q3 - 2013-2019, Q5 - 2008-2018 Thesis - 2002-2009 Range Rover - 2008-2019, Range Rover Sport - 2013-2019 Vectra - 1995-2003 Grand Scenic - 2008-2016 Toledo - 1998-2006 V60 - 2010-2016, XC70 2008-2019 Bora - 1998-2005, CC - 2007-2018, Passat - 2011-2016, Tiguan - 2007-2019